

1. Turning Your TV On and Off

- Start with your TV and DISH receiver **OFF**.
- To turn your TV **ON**, press and release the red TV POWER button on your **DISH remote**.



The screen saver appears whenever your receiver is OFF to remind you that your TV is still ON.

- To turn your TV **OFF**, press and release the red TV POWER button on your **DISH remote** again.

2. Turning Your Receiver On and Off

- Start with your TV **ON** and DISH receiver **OFF**.
- To turn your receiver **ON**, press and release the red POWER button on your **DISH remote**.



A TV picture appears.

- To turn your receiver **OFF**, press and release the red POWER button on your **DISH remote** again.

3. Staying on the Correct TV Input or Channel

Your TV needs to remain on the correct input or channel to watch your DISH service. If your TV is not on the correct input or channel, your TV may display a black, blue, or snowy screen, depending on your TV. The correct input or channel for your TV may be noted on a sticker on the back of your DISH remote or below.

Receiver #1	_____
TV1: ROOM	_____ INPUT/CHANNEL _____
Receiver #2	_____
TV1: ROOM	_____ INPUT/CHANNEL _____


How You Might Get On the Wrong Input or Channel:

- Changing the input on your TV to operate a DVD player or video game system
- Changing your TV input or channel using your TV remote or the TV itself
- Pressing the INPUT or CHANNEL buttons with your DISH remote when you are not in SAT mode
- Power outage causing your TV to get off the correct channel or input

4. Fixing a Black, Blue, or Snowy Screen

For demonstration only

Get your TV **OFF** the correct input or channel by pressing and releasing the CHANNEL UP button on your **TV remote** or the TV itself. (If you are already on a black, blue, or snowy screen, skip to 4a.)

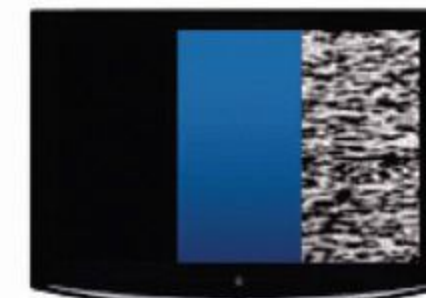

A black, blue, or snowy screen appears.

- Get your TV back **ON** the correct input or channel:

Cycle your TV through its inputs by pressing the INPUT, SOURCE, or TV/VIDEO button on your **TV remote** or the TV itself.

If the picture is not restored, change your TV to channel 3 or 4 using your **TV remote** or the TV itself.



A TV picture appears.

- Once your TV picture is restored, press and release the SAT mode button on your **DISH remote** to ensure you're in the proper mode for controlling your receiver.



The SAT button lights up.

5. Changing Channels

There are three ways to change channels on your receiver.

Type a channel number using the number buttons on the keypad.



- OR -

Press and release the CHANNEL UP/DOWN buttons.



- OR -

Use the Program Guide.

- Press and release the GUIDE button.



- Press and release the CHANNEL UP/DOWN or the PAGE UP/DOWN buttons to highlight the channel you want to watch.



- Press and release the SELECT button.



The TV channel changes.



The TV channel changes.



The Program Guide appears.



The Program Guide moves up or down.



The TV changes to the highlighted channel.